



WARNING - Failure to follow these warnings and the instructions could result in serious injury or death..

- The product are designed to use safety locks, some parts are disassemble and separated during the packaging. Please read this manual carefully before using the product and keep it for future reference.
- Do ensure that the playpen is fully open before use and all safety buckle are locked.
- Parents must not leave the child alone sitting in the Playpen. To prevent child from falling down, the parent must lock the safety buckle before leaving.
- When assembling & disassembling, please ensure to follow all the instructions. Otherwise it might cause damages to the parents.

Attention:

1. To ensure safety, do make sure to follow the playpen installation manual before using the playpen.
2. To avoid children asphyxiation, do not placed products that can affect children asphyxiation inside the playpen.
3. Do not leave children unattended.
4. Please check the playpen is in good condition or not before usage. If damage, do contact us immediately and stop continue to use it.

Folding Playpen Manual Guide




Playpen Installation



1. Unpack & stretch the playpen.

2. Unfold the playpen as shown in the image and lift up all the edges.
(Be careful when stretching the playpen)

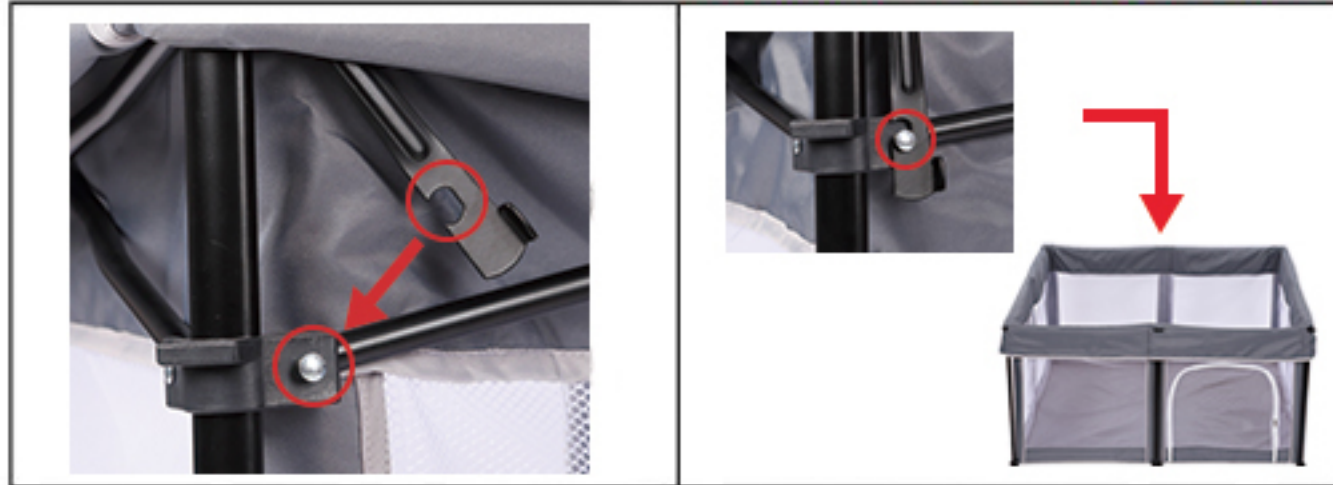

3. Secure the safety buckle on one of the playpen edges.

4. Once the safety buckle is locked, the installation is complete.


Playpen Compact Mode



1. Unlock the safety buckle.

2. Push the playpen inward to fold the playpen.

Playpen Cloth Removal

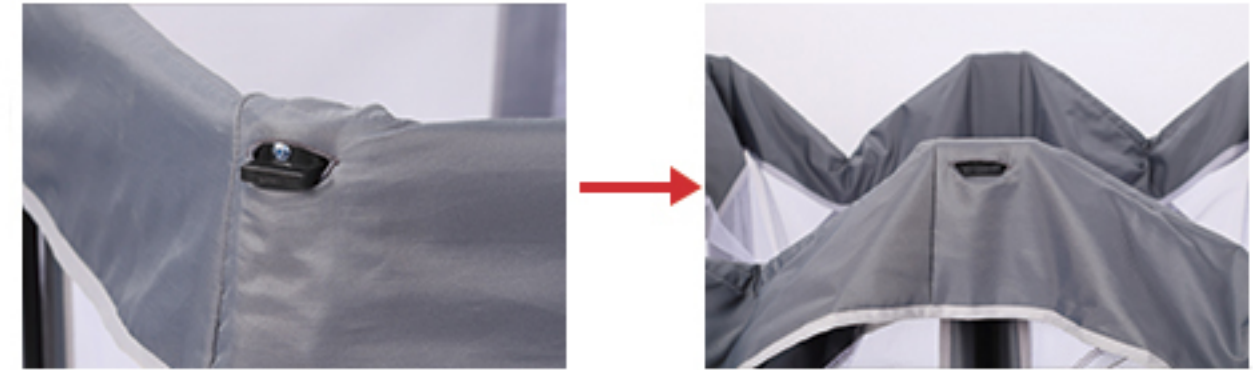

1. Remove the cloth from the edge of the playpen.



2. Pull the velcro at the bottom and complete the playpen cloth removal

Playpen Maintenance

Washable Fabric: The playpen cloth can be washed in your washing machine.