

BABY SWING – DESTRUCTION INSTRUCTIONS

To ensure the recalled product cannot be used again,
Please permanently disable the product by following the steps below.

1. OVERALL VIEW



2. PARTS TO BE DESTROYED

- ① Swing Rope (Cut)
- ② Swing Seat Fabric (Cut)

3. DESTRUCTION STEPS (CUT HERE)



4. PHOTO REQUIREMENTS – TAKE CLEAR PHOTOS OF THE FOLLOWING

BEFORE DESTRUCTION

Take 1 clear photo of the complete product in both modes.



AFTER DESTRUCTION

TAKE CLEAR PHOTOS OF THE FOLLOWING



Swing Rope (Cut)



Swing Seat Fabric (Cut)

IMPORTANT



- Do not use the product after destruction.
- Do not resell, donate, or give away the product.



Please keep the destroyed product until your refund has been processed.

BABY JUMPER – DESTRUCTION INSTRUCTIONS

To ensure the recalled product cannot be used again,
Please permanently disable the product by following the steps below.

1. OVERALL VIEW



2. PARTS TO BE DESTROYED

- ① Shoulder Strap (Cut)
- ② Top Hook and U-Clip (Removed)

3. DESTRUCTION STEPS (CUT HERE)



4. PHOTO REQUIREMENTS – TAKE CLEAR PHOTOS OF THE FOLLOWING


BEFORE DESTRUCTION

Take 1 clear photo of the complete product in both modes.



AFTER DESTRUCTION

TAKE CLEAR PHOTOS OF THE FOLLOWING

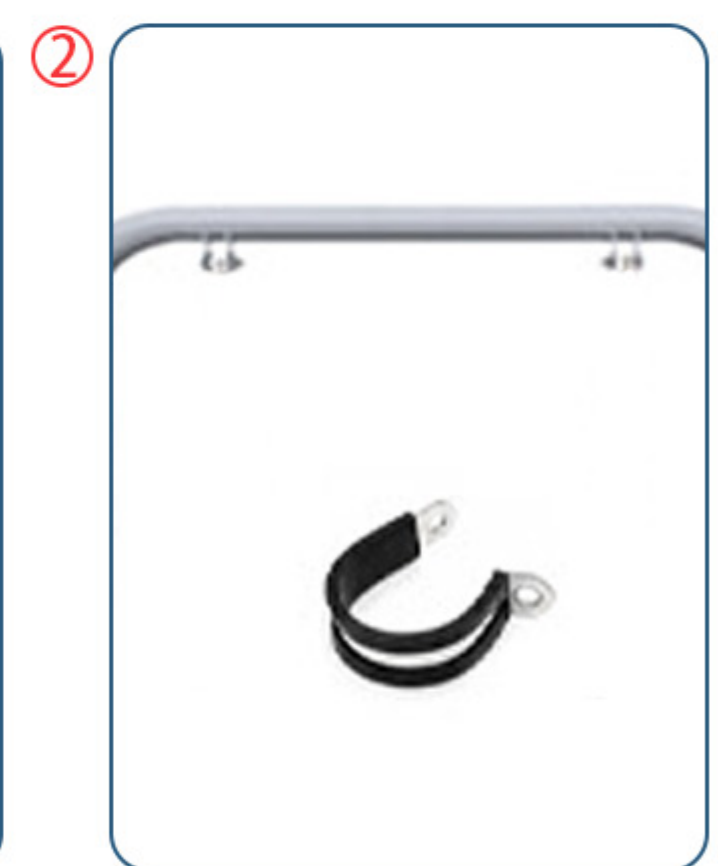

IMPORTANT



- Do not use the product after destruction.
- Do not resell, donate, or give away the product.



Please keep the destroyed product until your refund has been processed.

2-IN-1 TODDLER SWING & BABY JUMPER DESTRUCTION INSTRUCTIONS

To ensure the recalled product cannot be used again,
Please permanently disable the product by following the steps below.

1. OVERALL VIEW



2. PARTS TO BE DESTROYED

- ① Swing Rope (Cut)
- ② Swing Seat Fabric (Cut)
- ③ Shoulder Strap (Cut)
- ④ Jumper Top Strap/Rope (Cut)

3. DESTRUCTION STEPS (CUT HERE)



4. PHOTO REQUIREMENTS – TAKE CLEAR PHOTOS OF THE FOLLOWING


BEFORE DESTRUCTION

Take 1 clear photo of the complete product in both modes.



AFTER DESTRUCTION

TAKE CLEAR PHOTOS OF THE FOLLOWING

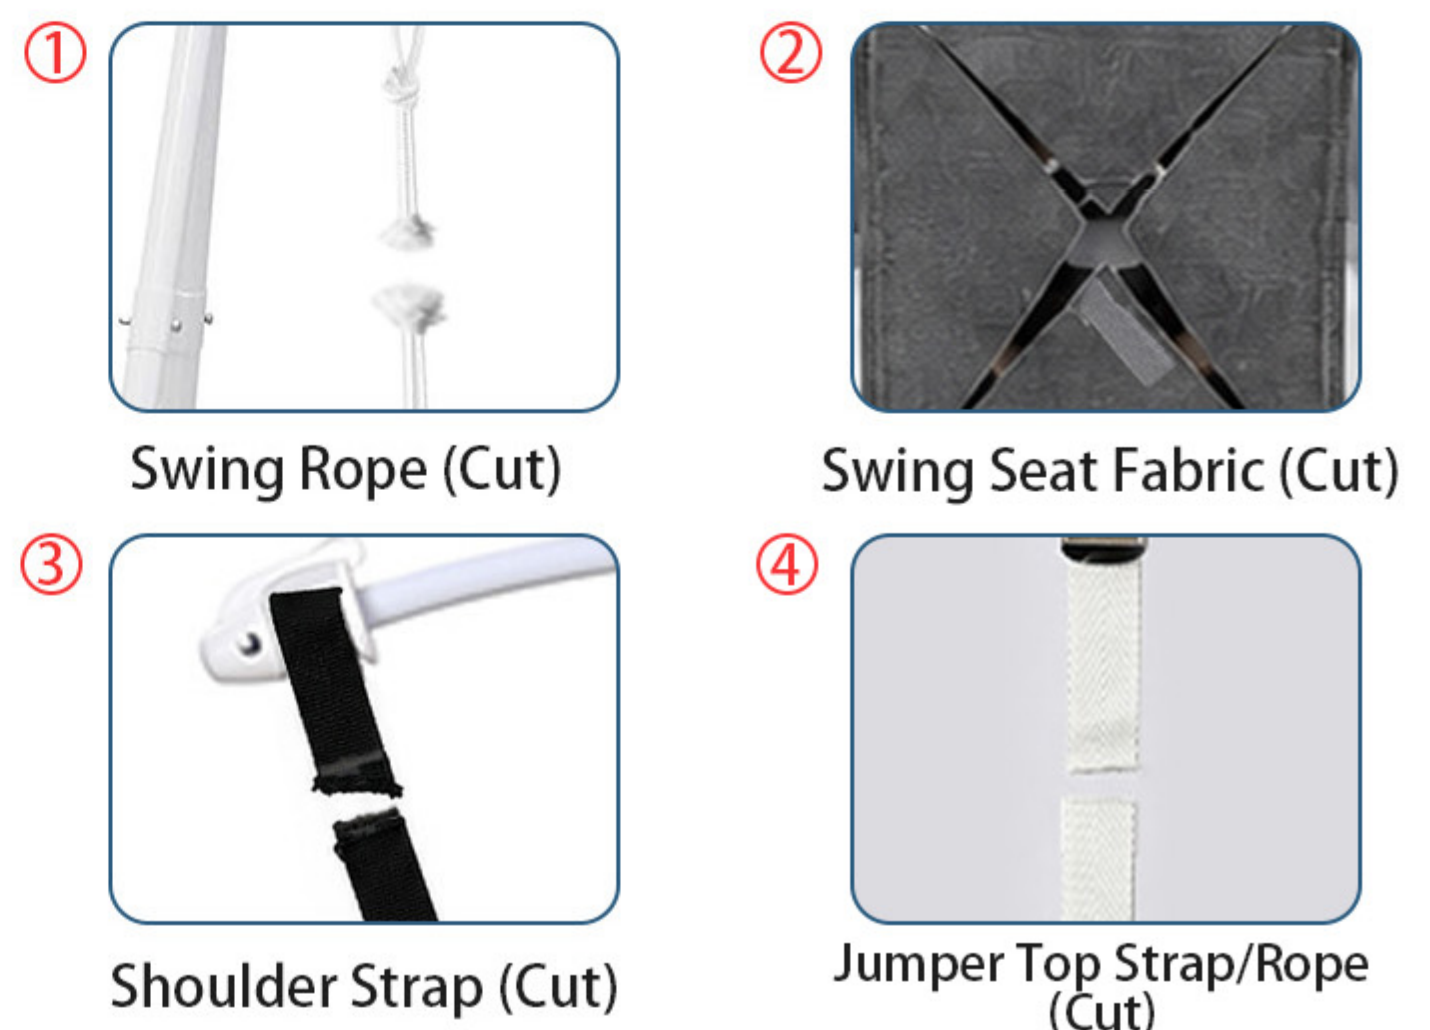

IMPORTANT



- Do not use the product after destruction.
- Do not resell, donate, or give away the product.




Please keep the destroyed product until your
refund has been processed.

2-IN-1 TODDLER SWING & BABY JUMPER DESTRUCTION INSTRUCTIONS

To ensure the recalled product cannot be used again,
Please permanently disable the product by following the steps below.

1. OVERALL VIEW

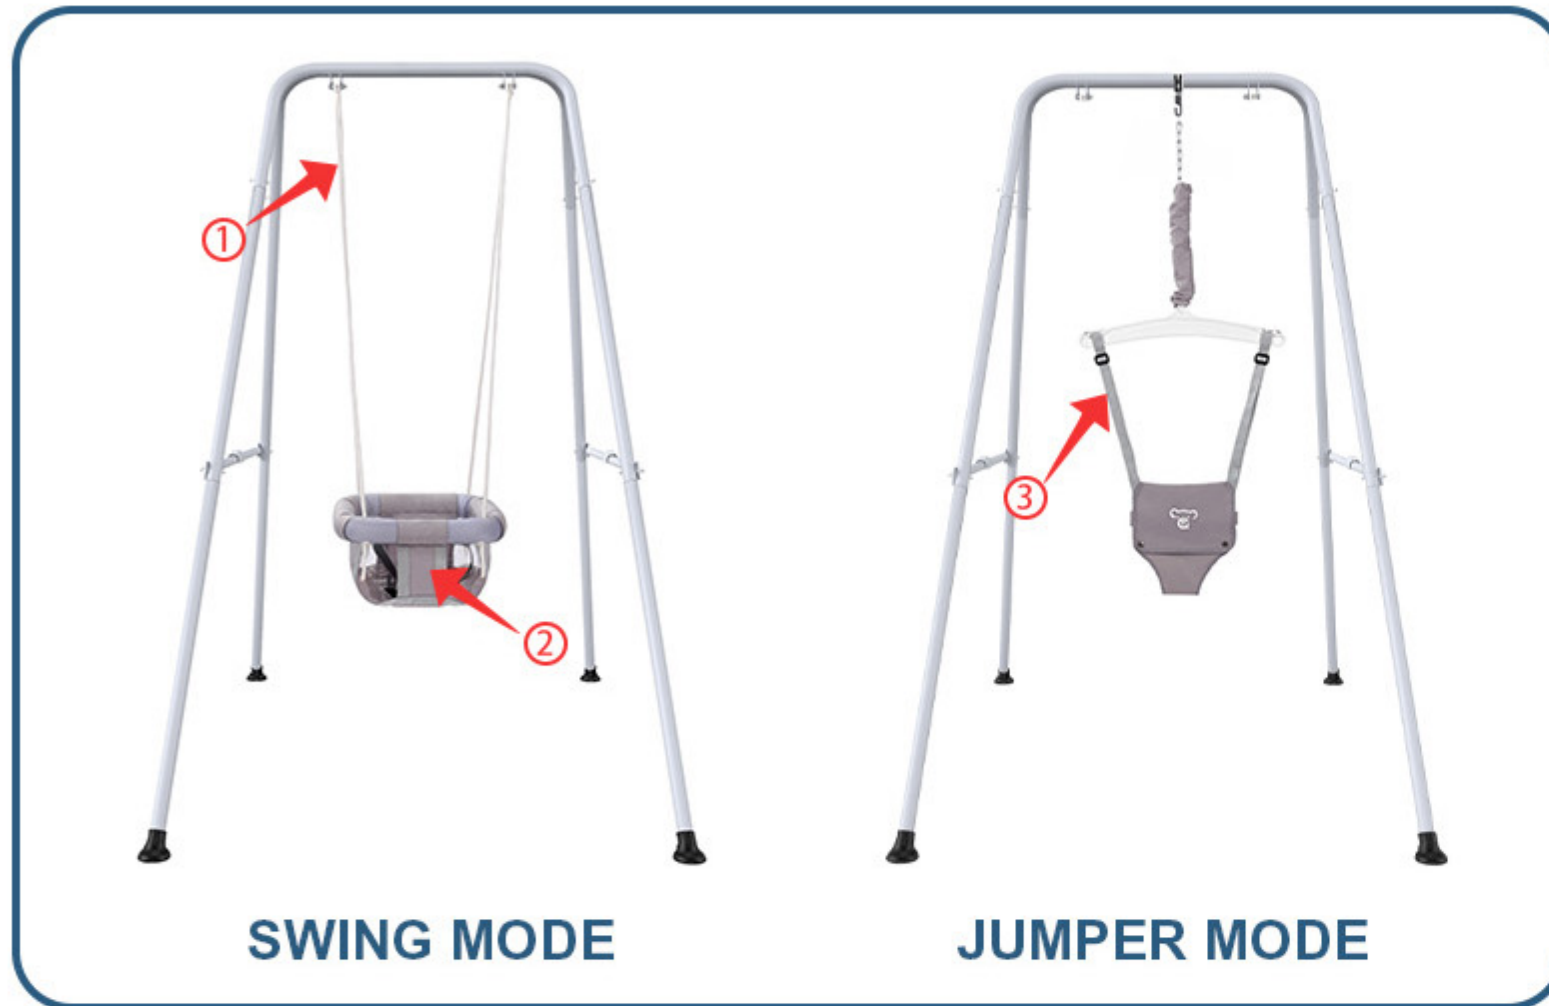

2. PARTS TO BE DESTROYED

- ① Swing Rope (Cut)
- ② Swing Seat Fabric (Cut)
- ③ Shoulder Strap (Cut)
- ④ Top Hook and U-Clip (Removed)

3. DESTRUCTION STEPS (CUT HERE)



4. PHOTO REQUIREMENTS – TAKE CLEAR PHOTOS OF THE FOLLOWING


BEFORE DESTRUCTION

Take 1 clear photo of the complete product in both modes.



AFTER DESTRUCTION

TAKE CLEAR PHOTOS OF THE FOLLOWING

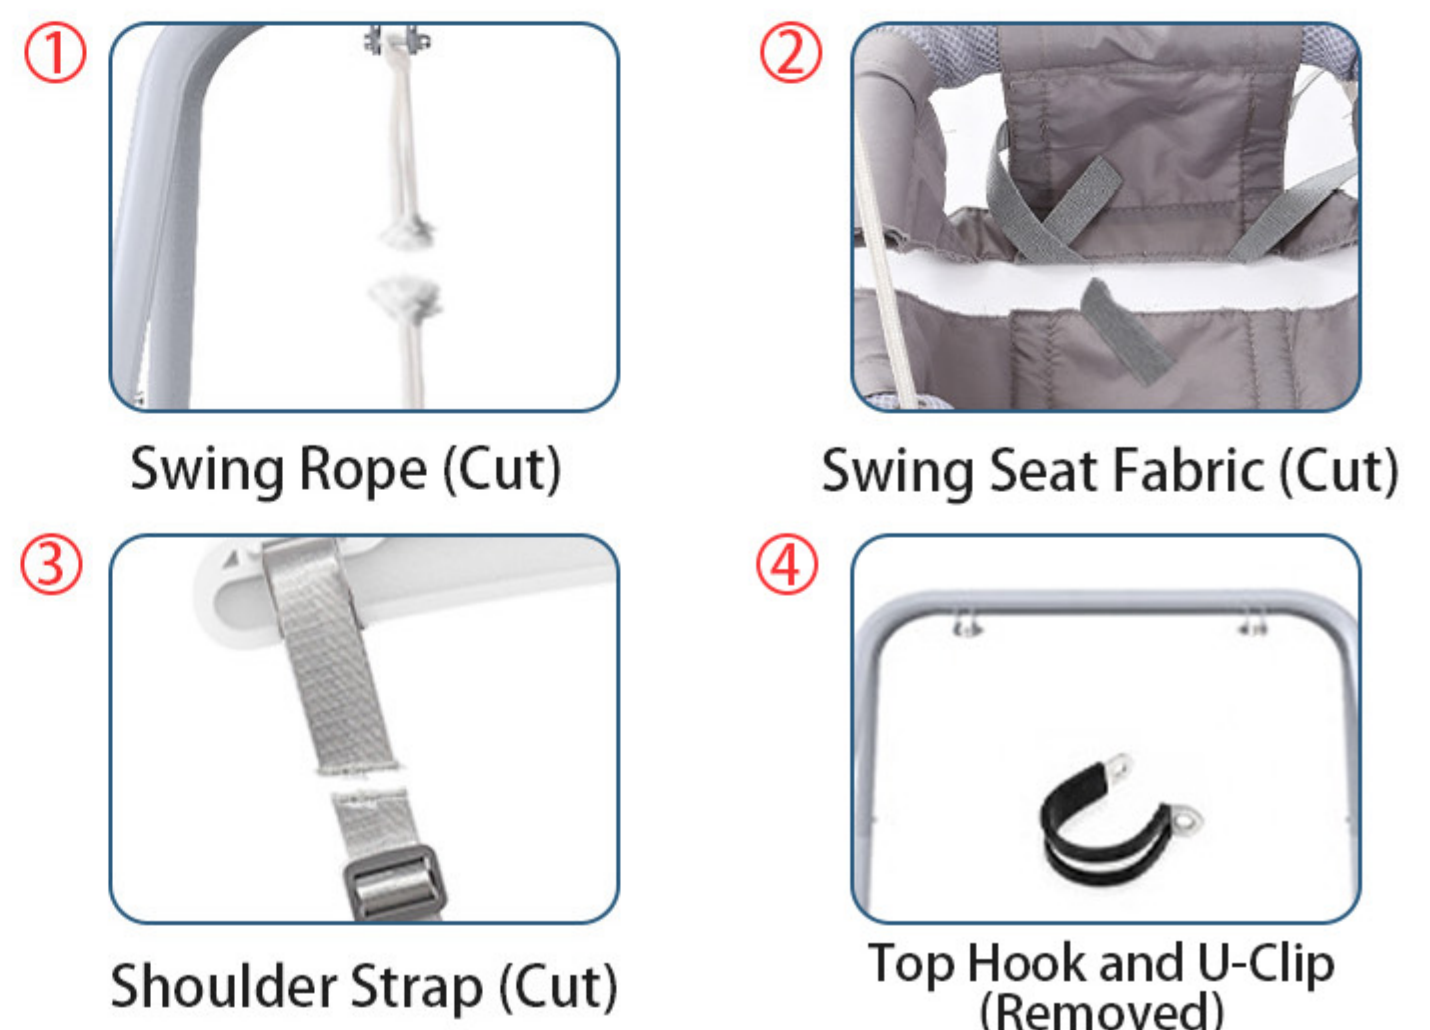

IMPORTANT



- Do not use the product after destruction.
- Do not resell, donate, or give away the product.



Please keep the destroyed product until your
refund has been processed.